


# How to *Manually Pair* with a *Supra eKEY Fob*

1. Make sure Bluetooth is on.

## Generic Instructions

- |  |
|--|
| 1. Make sure the device's Bluetooth® is on.    |
| 2. If the fob is not listed, scan for devices. |
| 3. Turn on the fob.                            |
| 4. Select the Supra device (ex: SUPRA-1B09).   |

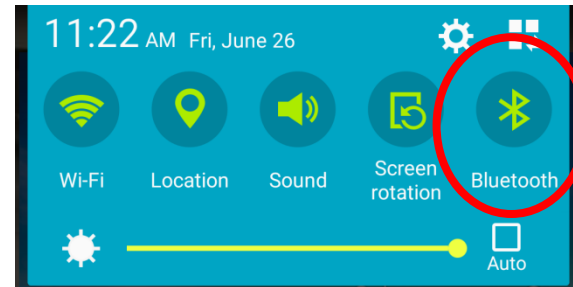

**Note:** On some phones, enter 0000 or 1234 for the passcode and press OK.  
You may need to read and follow the manufacturer's instructions on "How to pair devices" for your specific phone or tablet.

# How to *Manually Pair* with a *Supra eKEY Fob*


## Generic Instructions

1. Make sure the device's Bluetooth® is on.
2. If the fob is not listed, scan for devices.
3. Turn on the fob.
4. Select the Supra device (ex: SUPRA-1B09).

**Note:** On some phones, enter 0000 or 1234 for the passcode and press OK.  
You may need to read and follow the manufacturer's instructions on "How to pair devices" for your specific phone or tablet.



2. If the fob is not listed, press Scan.

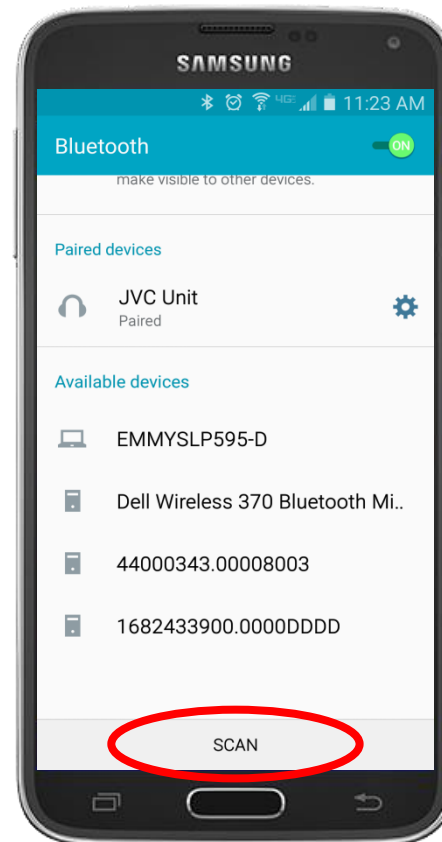

# How to *Manually Pair* with a *Supra eKEY Fob*

3. Turn on the fob.

## Generic Instructions

- |  |
|--|
| 1. Make sure the device's Bluetooth® is on.    |
| 2. If the fob is not listed, scan for devices. |
| 3. Turn on the fob.                            |
| 4. Select the Supra device (ex: SUPRA-1B09).   |

**Note:** On some phones, enter 0000 or 1234 for the passcode and press OK.  
You may need to read and follow the manufacturer's instructions on "How to pair devices" for your specific phone or tablet.





# How to *Manually Pair* with a *Supra eKEY Fob*

4. Select the listed fob.

## Generic Instructions

1. Make sure the device's Bluetooth® is on.
2. If the fob is not listed, scan for devices.
3. Turn on the fob.
4. Select the Supra device (ex: SUPRA-1B09) to start pairing.

**Note:** On some phones, enter 0000 or 1234 for the passcode and press OK.  
You may need to read and follow the manufacturer's instructions on "How to pair devices" for your specific phone or tablet.

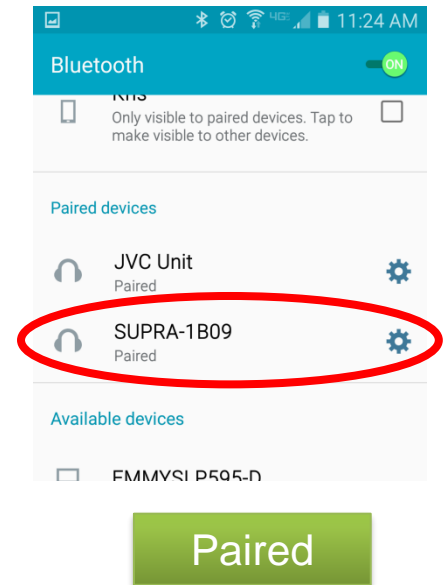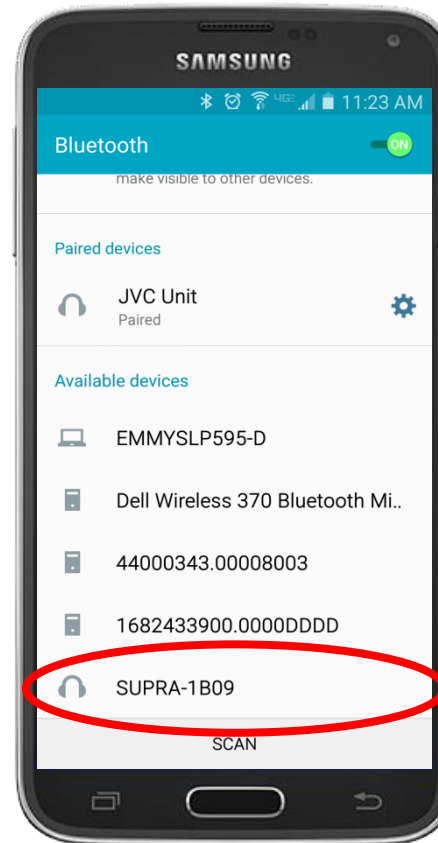

For the latest information, visit us at  
[www.tracessmanager.com](http://www.tracessmanager.com).



© 2025 Honeywell International Inc. All rights reserved. Supra is a part of Honeywell. TRACcess and eKEY are registered trademarks of Honeywell. Other brand and product names are or may be the trademarks of, and are used to identify products or services of, their respective owners.